

COIL/UNIT HANDING GUIDE

<p>AIR to BACK</p> <p>Unit and coil connections shown above are Right Hand. (RH) Inlet air to back</p> <p>(RH) COIL CONNECTIONS</p>	<p>(LH) COIL CONNECTIONS</p> <p>AIR to BACK</p> <p>Unit and coil connections shown above are Left Hand. (LH) Inlet air to back</p>
<p>Vertical Largo Units are handed as "Inlet Air to Back"</p>	<p>Horizontal Largo Units are handed as "Inlet Air to Back"</p>
<p>RBV</p>	<p>RAH</p>
<p>RAV</p>	<p>RBH</p>
<p>SSL/SBS</p>	<p>SBH/SBV</p>
	<p>SBM</p>

Note: The industry standard to determine handing of an HVAC unit is with Inlet Air to Back.

*Inlet Air aka Return Air