

## **Submittal**

## **SBVD External Space Requirements**


Model SBVD Direct Drive Blower Coil Unit External Space Requirement

## **DIMENSIONS**

SIZE	Α	В	С
08	19	30	20
	[483]	[762]	[508]
12	19	36	25
	[483]	[914]	[635]
16	19	44	20
	[483]	[1118]	[508]
20	25	50	20
	[635]	[1270]	[508]
30	25	59	20
	[635]	[1499]	[508]
40	25	68	20
	[635]	[1727]	[508]

## NOTES

- 1.All dimensions are Inches [millimeters].All dimensions are  $\pm 1/4$ " [6mm]. Metric values are soft conversion.
- 2.Right hand unit shown, left hand unit opposite. Motor/drive location may be specified Left or Right Hand. Standard control enclosure location matches motor/drive position.
- 3.Provide sufficient clearance to permit access to controls and comply with applicable codes and ordinances.
- 4.Flat filter rack may be located at unit inlet as required. See drawing BC-SBHD-16.0 for filter rack details.
- 5.Dual blower units require service access to both side access panels for moto/blower removal.

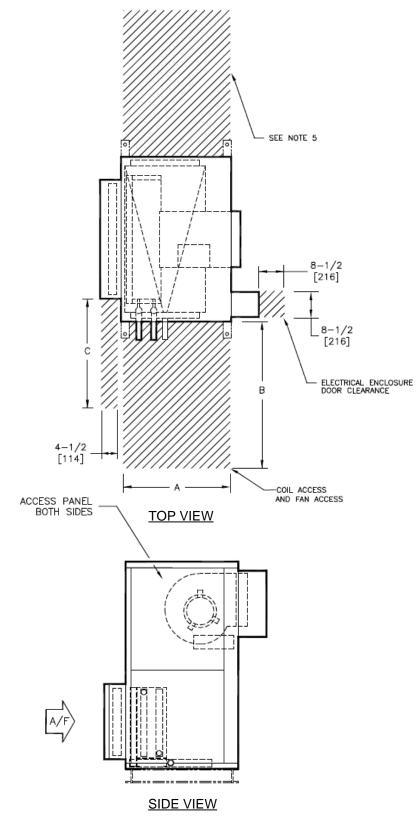

New	08/04/22	SP	New Release
Revision Date	Version Date	Initiated By	Description