
## **Submittal**


SBVD Dual Blower Arr. 2 & Mixing Box


Model SBVD Direct Drive Dual Blower Coil Unit Basic Unit-Discharge ARTG.2 w/ Mixing Box

## NOTES:

- 1.All dimensions are Inches [millimeters].All dimensions are  $\pm 1/4$ " [6mm]. Metric values are soft conversion.
- 2.Right hand unit shown, left hand unit opposite. Motor/drive location may be specified Left or Right Hand. Standard control enclosure location matches motor/drive position.
- 3.Provide sufficient clearance to permit access to controls and comply with applicable codes and ordinances.
- 4. See drawing BC-SBHD-16.0 for filter rack details.
- 5. Outside and return air damper linkage is optional.
- $6. See \ coil \ connection \ details \ drawings \ for \ Coil \ connection \ sizes \ and \ locations.$
- 7. High efficiency filter rack not available with mixing box.

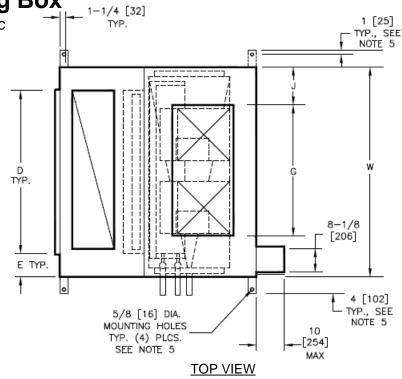

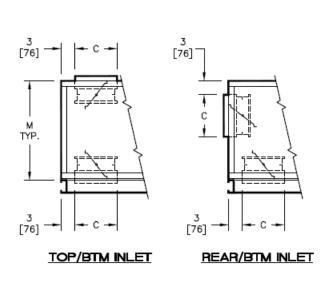

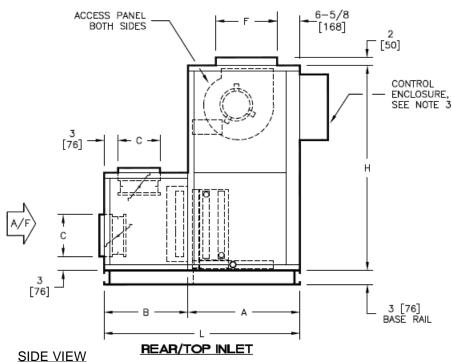

## **DIMENSIONS**

SIZE	UNIT MODEL		L	W	Н	А	В	С	D	E	F	G	J	М	
30	10	Χ	8	51	59	56	30	21	12	45	7	18	36-1/2	11-1/4	30
	[254	Χ	203]	[1295]	[1499]	[1422]	[762]	[533]	[305]	[1143]	[178]	[457]	[927]	[286]	[762]
40	10	Χ	8	54	68	59	30	24	15	48	10	18	36-1/2	11-1/4	30
	[254	Χ	203]	[1372]	[1727]	[1499]	[762]	[610]	[381]	[1219]	[254]	[457]	[927]	[286]	[762]

New	08/04/22	SP	New Release			
Revision Date	Version Date	Initiated By	Description			

All rights reserved. No part of this work may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage retrieval system without permission in writing from Superior Rex.